


# Grandstream Phone Configuration

## Step-1: Login to the Web GUI of GRP Phones

Collect the IP address from the graphical user interface of the phone

Example: let 192.168.5.110 is the IP address gained by the phone from DHCP pole of the network.

Hit the IP address from any browser. You will get the following web console

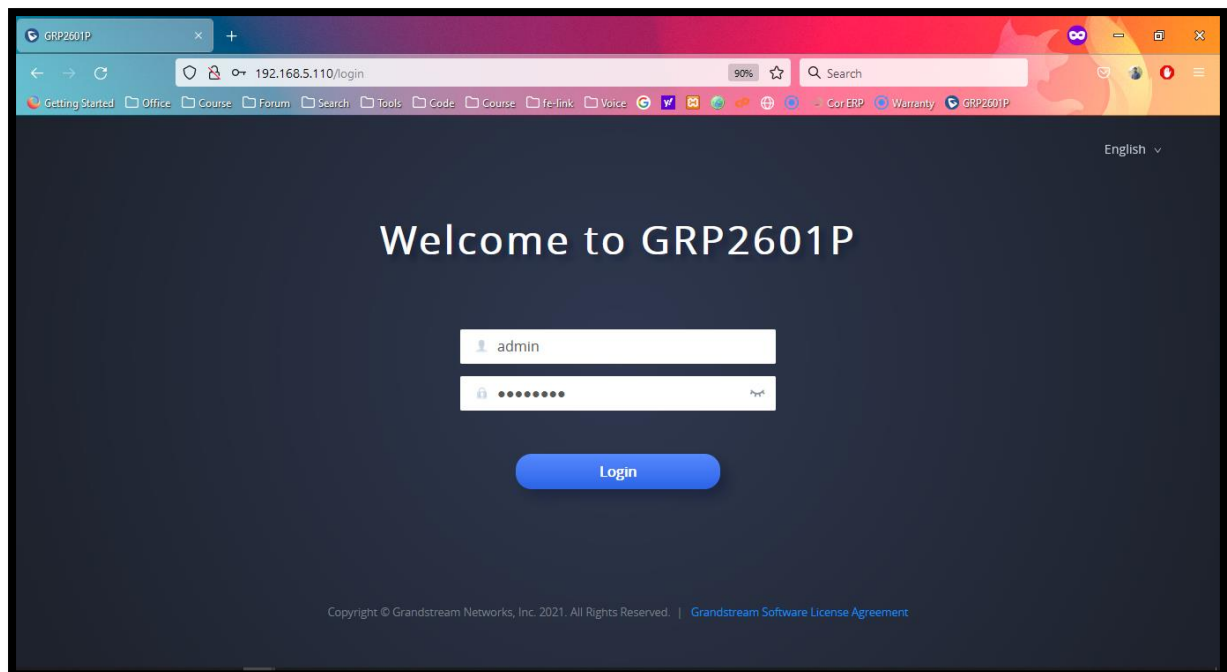


Default User ID : admin

Default Password : Random password available on the sticker at the back of the IP-Phone.

**Press Login**

**Step-2: Account Configuration process of the phone**  
**Go to Accounts → Account 1 → General Setting**

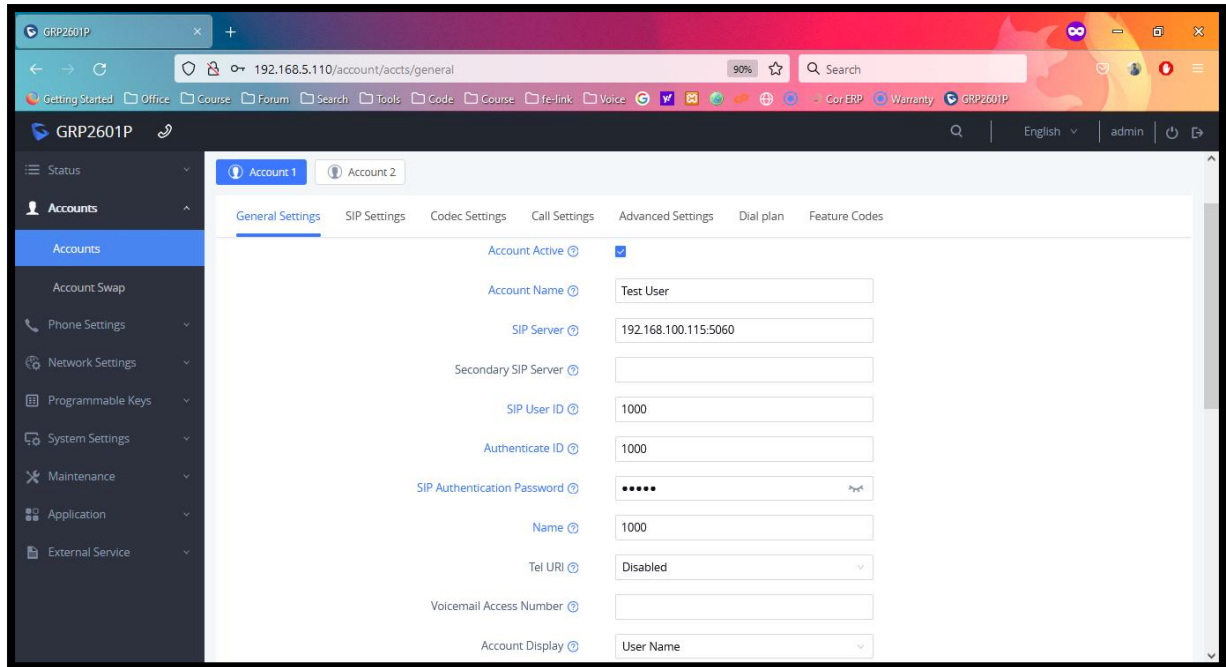

**Fill-up the following information accordingly**

- 1. Account Active** : Yes
- 2. Account Name** : User Name (Test User in our case).
- 3. SIP Server** : Provide SIP Server Address & port here.
- 4. SIP User ID** : Provide the SIP ID defined in server here.
- 5. Authentication ID** : Provide the auth ID here.
- 6. Authentication Password** : Provide the SIP password defined in server.
- 7. Name** : Define User Name Here.
- 8. Account Display** : Select the Display preview here.
- 9. Press Save & Apply.**

**Check the Configuration status of the phone from the status section of the Web GUI**